 


## User's manual

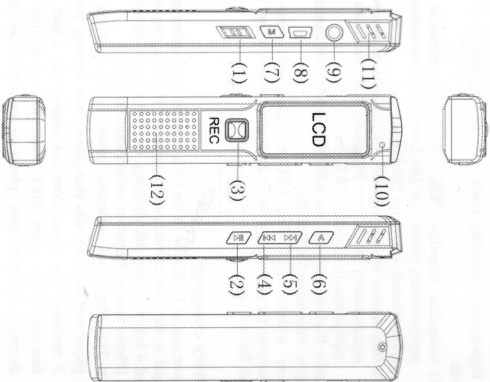

Note: Pictures for reference only, please refer to the actual product.


### ● Keys function

(1) Power ON/OFF (if long time don't use, turn the switch


in the "OFF" position

- (2) PLAY key: turn on, turn off, play, pause, ok
- (3) REC key: A key can both recordings and can keep the recording
- (4) >Key: Next song, Next item, Volume increase (Long press for fast forward)
- (5) <Key: Previous Song, Volume decrease (Long press for retreat quickly)
- (6) "V" Key: Short press to enter the volume mode, press and hold to switch between music file and audio file
- (7) "M" key: function mode, A-B repeat, (long press "M" key is for deleting files mode under the pause state)
- (8) USB: Charging port, the computer connect port
- (9) Earphone jack
- (10) Record indicator light: shine during recording, flash during pause recording
- (11) MIC jack
- (12) Speaker

### ● Main Function Mode

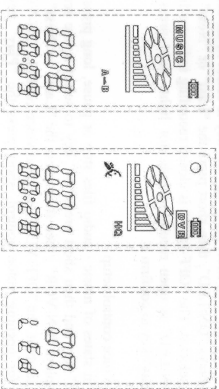

### ● Display shows

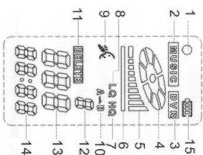

- 1. Recording light indicator
- 2. Music mode
- 3. DVR recorder mode
- 4. Turntable
- 5. Volume
- 6. Switching volume marks
- 7. HQ recording
- 8. LQ recording
- 9. Recording mark
- 10. A-B repeat
- 11. Delete
- 12. Songs thousand digit m
- 13. Songs ordinal number
- 14. Time
- 15. Battery signal

### ● Power ON/OFF


Turn power switch to "ON", then press "PLAY" key, the player will automatically boot  
Press "PLAY" key for 3+ seconds until the player shutdown (if long time don't use, turn the switch in the "OFF" position)

### ● Voice Recording

In any condition, press "REC" to record, Press "Play" to stop/continue recording. Under recording, press "REC" to save the file, press "Play" to play the file. (During recording press "Play" to stop recording, the light is blinking)

### ● Delete Files

Delete individual file: under the pause or stop state, find out files you want to delete, long press the "M" key to enter the delete mode, the LCD screen displays "DELETE" and "ONE" sign and flashing, short press up / down keys to select YES, and then press the "Play" key to delete the current track (press the "M" key to go back).

**all files:** under the pause or stop state, long press the "M" key to enter the delete mode, the LCD screen displays "DELETE", and "ONE" signs and flashing, then a short press for "M" key, LCD screen will display and flash "ALL" and "ONE", then press up / down keys to select YES, and then press "M" key to confirm to delete all files under directory. If you press the "M" key to go back, can not recover it after deleting, please pay attention to the backup). The sign of deleting files is . More deleting files, more deleting time, please do not force to turn off the power switch during deleting, otherwise it will cause a corrupted file.

**/Pause**  
 Recording/music mode, press "Play" to start playback, press "Play" to pause/play

**Change songs**  
 Playing mode, press "<" key or ">" key to change songs

**Music files and audio files switching**  
 Playing/stop mode, press and hold "V" key for music files and audio files switching. In music mode, press and hold "V" key will automatically switch to the audio file, press "Play" key to return to pause/play audio files. In playing audio file mode, press and hold "V" key will automatically switch to the music files. (No "Play" button to pause/play music files. (No "V" key will not switch))

**Volume Control**  
 Playing music files/audio files mode, press "V" key (the

"bar" on the LCD screen is flashing), then press ">" key to increase volume, press "<" key to decrease volume. Once finished the adjusting, then press "V" key (the "bar" on the LCD screen will stop flashing) to exit the volume adjustment mode.

● **A-B repeat**  
 In the playing mode, press "M" button to set the start repeat point A, and press "M" again to set the end repeat point B, LCD will display AB to achieve A-B repeat function between two points, then press "M" key to exit A-B repeat mode.

● **Connect to PC**  
 Connect the player to PC via USB cable, please removing the disk under normal method to prevent data missing

● **Function Settings**  
 1. LED record lamp setup  
 In states of music / audio files stop or pause, long press the "M" key and then short press the "M" key to select it, the screen displays "ON/LED", then short press the "Last" or "Next" key to select it. The "OFF-LED" is closed recording indicator light, "ON-LED" is open recording indicator light; short press the "Play" key to confirm it.

2. Voice control setup  
 In states of music / audio files stop or pause, long press the "M" key and then short press "M" key to select it, the screen displays "ON/VOR", then short press the "Last" or "Next" key to select it, the "OFF-VOR" is closed voice control, "ON-VOR" is for opening voice control, short press the "Play" key to confirm it.

3. Selecting recording types

In states of music / audio files stop or pause, short press the "M" key to select HP (HQ) or LP (LQ) recording types. (HP is high-quality recording mode, LP is long-time recording mode)

- (1) Long-time recording (32K MP3) 2GB memories can approximately record for 140 hours, 4GB memories can approximately record for 280 hours.
- (2) High quality recording (128K MP3) 2GB memories can approximately record for 35 hours, 4GB memories can approximately record for 70 hours.

Audio files are saved in the RECORD folder, file names are put in order using VOICE001.

Note: without audio files, LED recording light setup and recording types setup can not be carried on, please record first, and then set up.

● **Battery charging**  
 Plug one end of USB wire in the USB connector, the other end is plugged in the USB connector of computer. The charging is full around 4 hours, during full charging, the battery icon shows full state. (Please turn on the power switch when charging.)

Note: This player has automatic power saving function; the player will automatically shut down under the stop state in 3 minutes! The player does not support the folder play function, please copy MP3 music files under the root directory of portable disk, please do not copy folders in the portable disk, otherwise, the player can not identify music files in the folders.

**Technical Specifications**

Player size	95X20X13.5MM	
LCD screen	digital LCD screen	
USB port	USB 2.0 High Speed	
Memory capacity	2GB-4GB (optional)	
Battery	3.7V/350mA Li-battery	
Music	MP3	8KHz-48KHz
	WMA	32KHz-48KHz
Recording	LQ	32 Kbps
	HQ	128 Kbps
Earphone output	Maximu	10mW + 10mW(32Ohm)
	Frequenc	20Hz to 20KHz
	SNR	>70dB
Using	-5 to 40°C	
OS	Windows 98 Second Edition/Millennium Edition/2000/XP/ Windows 7	

**Statements**

Users should backup data during the using process, the company is free from any personal data losses and damages caused by software and hardware error operation, product repair, battery replacement or other accidents and it is not liable for any other indirect losses. At the same time, we cannot control misunderstanding from users caused by this handbook, therefore, the company will be not responsible for possible accidental damages in using this handbook, and not liable for third party claims caused by using products. (This machine system software will be accounted for part of capacity, and some difference with nominal capacity is normal)